


OPERATING INSTRUCTIONS


PLEASE NOTE THAT ALL TRANSACTIONS ARE MONITORED

1. CONNECT YOUR FILL HOSE TO THE STATION OUTLET.
2. INSERT CARD AS SHOWN WITH CHIP AREA UP.
3. A PIN WILL LOCK CARD IN READER.
4. ENTER YOUR PIN NUMBER AND PRESS THE "#" BUTTON.

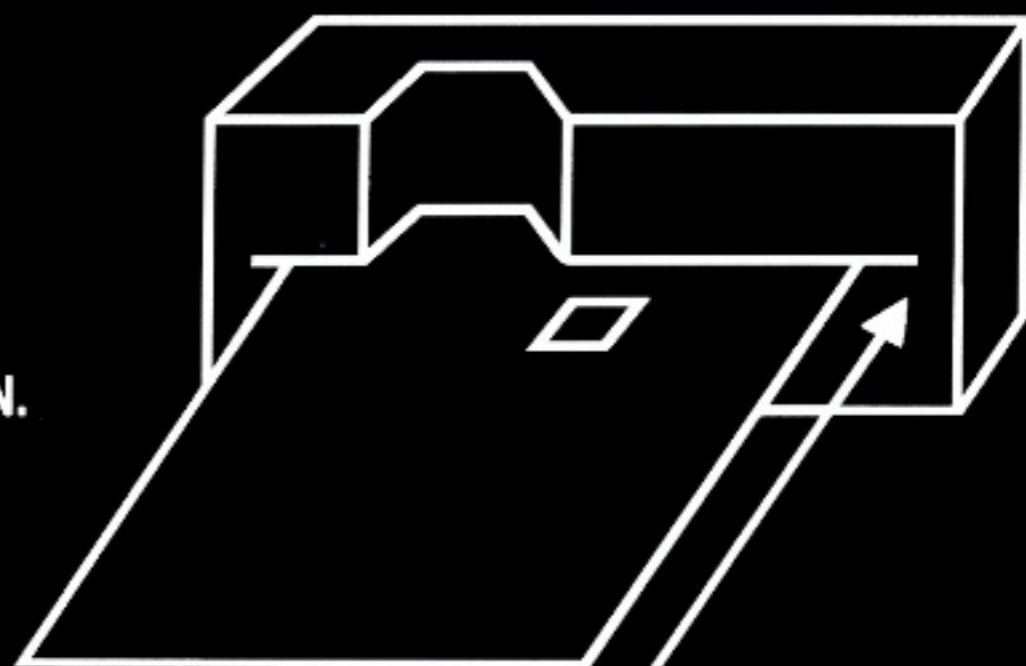

5. FOLLOW PROMPTS ON SCREEN AND ENTER AMOUNT OF WATER REQUIRED.
6. PRESS THE "#" BUTTON TO PROCEED WITH TRANSACTION. PRESS THE "*" BUTTON TO CANCEL TRANSACTION.
7. THE READER WILL DEBIT YOUR CARD AND THEN PROCEED WITH DISPENSING THE REQUESTED AMOUNT OF WATER. NOTE: IF YOU HAVE INSUFFICIENT BALANCE YOU WILL BE ASKED TO SELECT A NEW AMOUNT.
8. YOU CAN STOP THE TRANSACTION AT ANY TIME BY PRESSING THE RED "STOP/EJECT" BUTTON.
9. WHEN WATER HAS STOPPED DISPENSING YOUR CARD BALANCE WILL BE UPDATED BASED ON AMOUNT OF WATER ACTUALLY DISPENSED. YOUR NEW CARD BALANCE WILL BE BRIEFLY DISPLAYED.
10. PLEASE DO NOT ATTEMPT TO REMOVE YOUR CARD UNTIL THE PIN IN THE READER RELEASES IT.

Press # for ENT
Press * for CLR

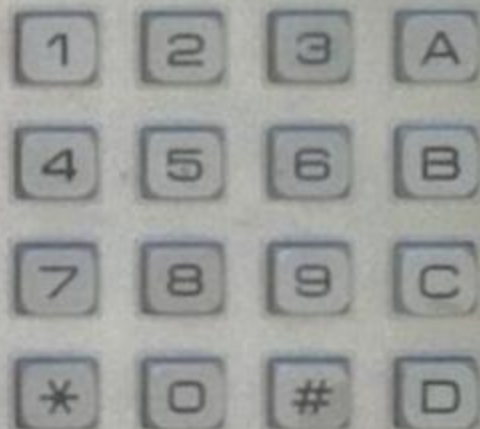

STOP/EJECT